

# Airbuds NC1 True Wireless Earbuds

Model # 12942

## Accessories

Wear the right size ear tips for your ears. Adjusting Earbuds correctly achieves the best noise reduction performance and sound quality.

## Bluetooth Connection

### Using dual earbuds mode

After taking out “NC1” Earbuds from the charging case, both L&R earbuds will turn on automatically with voice prompt “Power on”. Soon after, L&R earbuds will pair automatically, and the R earbud LED indicator will blink red and green.

### Using single earbud mode

If you only take out one earbud from the charging case, it will turn on automatically with voice prompt “Power on”, and the LED indicator on the single earbud will blink red and green.

### Connect with your smart device:

When you hear voice prompts “Power on”, after connected, R earbud LED indicator will blink red and green. Activate your smart device’s Bluetooth and search “NC1”. Choose and click “NC1”, then you will hear “Connected” voice confirmation.

Start to enjoy music after you finished the above steps.

## Operating

**L**

**SHORT PRESS**

- ▶|| x 2
- ◀ x 3
- ☎ x 1
- 🔊 x 2
- 🔇 x 1

**PRESS AND HOLD**

- 🎤 : 02 (Dual Mode)
- 🔌 : 03
- 🔊 : 05
- 🔇 : 05
- ☎ : 02

**R**

**SHORT PRESS**

- ▶|| x 2
- ◀ x 3
- ☎ x 1
- 🔊 x 2
- 🔇 x 1

**PRESS AND HOLD**

- 🔌 : 03
- 🔊 : 05
- ☎ : 02
- 🎤 : 02 (Single Mode)
- 🔊|--- : 02 Active Noise Canceling

## **Power On/Off**

As soon as you take out earbuds from the charging case, earbuds will turn on automatically.

Putting earbuds back into the charging case will automatically turn off earbuds.

**Note:** Normal mode is the default mode when earbuds are turned on.

## **Answer/Hang up/Reject Phone Call**

To answer an incoming call, click L or R earbud once.

To reject an incoming call, long press 2 seconds on L or R earbud.

To hang up a phone call, double-click L or R earbud.

## **Voice Assistant**

In Dual Mode: Long press 2 seconds L earbud to turn on voice assistant.

In Single Mode: Long press 2 seconds R earbud to turn on voice assistant.

## **Play/Pause Music**

When playing music, double-click L or R earbud to play/pause music.

## **Last Song/Next Song**

When playing music, triple-click L earbud to return to the previous song, or triple-click R earbud to advance to next song.

## **Decrease/Increase Volume**

When playing music, short press L earbud to decrease volume, or short press R earbud to increase volume.

## **ANC (Active Noise Control) Mode**

In normal mode, hold R earbud for 2 seconds to turn on ANC. (ANC is not supported in single mode)


## **Charging**

Please use the provided charging cable to recharge your earbuds with charging case. Charging case LED indicator will light up green when charging.

After earbuds are fully recharged, all four LED indicator lights will remain on without blinking.

## Charging Case

- ○ ○ ○ 1%~25% (Power)
- ● ○ ○ 25%~50% (Power)
- ● ● ○ 50%~75% (Power)
- ● ● ● 75%~100% (Power)

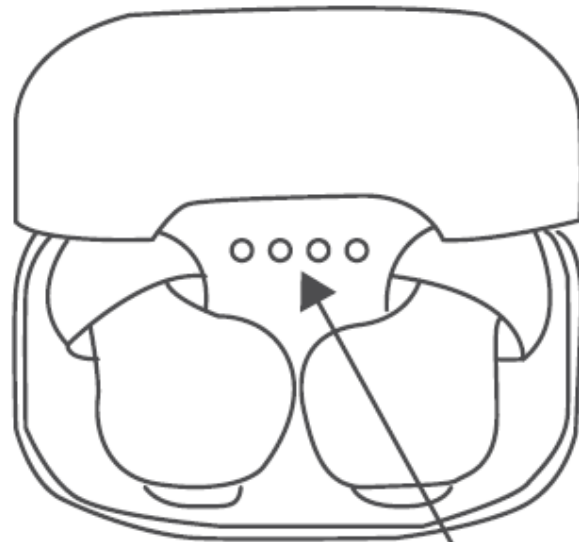

LED LIGHT

## Reset

As soon as you take out your earbuds from the charging case, long press R earbud for 10 seconds until the red LED indicator on R earbud blinks 5 times, it is now ready for pairing.

Put the R earbud into the charging case again and then take out both earbuds from the charging case, you will hear earbuds are in pairing mode when voice prompt "Power on" is heard.

After earbuds are paired, R earbud LED indicator will blink red and green, then you can start using your NC1 Airbuds.